



## Rear Outer Trailing Arm Bushings BK006

### Required Tools:

- Hydraulic jack and 2 stands (lift optional but recommended)
- Wrenches – 18mm, 21mm
- Sockets – 10mm, 13mm, 18mm, 21mm
- Pry-bar
- Drill with 2" hole saw

### Installation:

1. Lift vehicle and support with stands under the rocker jack points shown in **Image 1**.
2. Remove both rear wheels.
3. Using an 18mm wrench and socket, remove the outer mounting bolt then pull down the trailing arm to provide access to the bushing. See **Image 2**.
4. Using a bushing removal tool, press the OE bushing out of the spindle.
5. Insert the BMR polyurethane bushing halves.
6. Lube the inside of the BMR bushings then install the center sleeve.
7. Lift the trailing arm back into place and insert the bolt.
8. Torque to 85 ft/lbs.
9. Mount wheels and lower vehicle.



**WWW.BMRFABRICATION.COM**

*This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to the vehicle/person during installation or use of this product.*