



STB110 INSTALLATION INSTRUCTIONS

Tools required:

- Ratchet Handle
- 13mm socket

Instructions:

1. Using the **13mm** socket, remove all **6** strut tower bolts as shown in **IMAGE 1 & 2**.
2. Install STB110 using supplied hardware using **13mm socket** shown in **IMAGE 3 & 4**.
3. Tighten all bolts to **27 ft/lbs**.

(Note: The upper strut mount studs have play that allow them to pivot slightly, this will not impact the vehicles alignment. If you are having trouble installing the strut tower brace, you can pivot and move the shock studs to align with the strut tower brace.)

Some 2021/2022 Challengers and Chargers have clearance issues between the evap line going to the intake and STB110. After installation, ensure that there is clearance in the area shown.



IMAGE 1



IMAGE 2

CHECK FOR CLEARANCE

ON 2021/22s

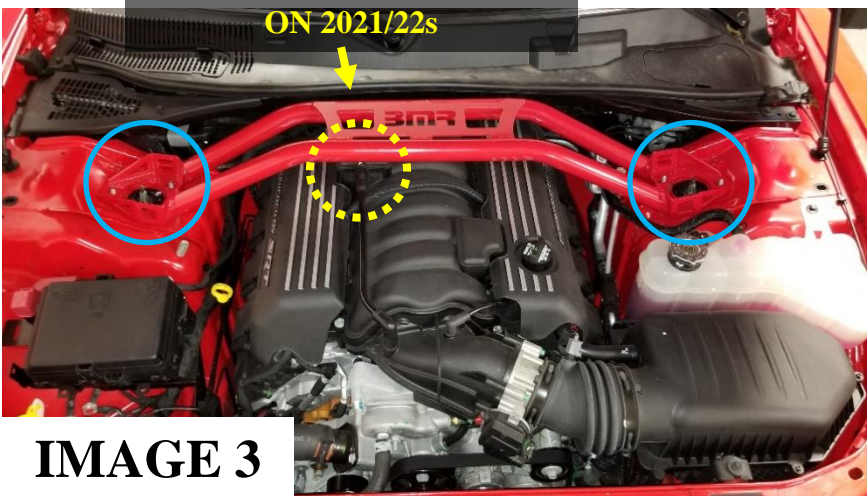


IMAGE 3



IMAGE 4

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.