



CJR760

S550 MUSTANG CHASSIS JACKING RAILS – 2015 to 2020



Tools required:

1. Ramps or jack and jack stands
2. Ratchet
3. 15mm socket

Installation:

1. Place vehicle on ramps or lift vehicle and secure on jack stands
2. Remove the eight (8) 15mm bolts as shown in **IMAGE 1** and **2**.



(NOTE: THE FRONT TWO BOLT HOLES AND FORWARD-REAR BOLT HOLE WILL BE REUSED IN ADDITION TO THE HOLES CIRCLES BELOW. THESE HOLES SHOULD MATCH THE THREADS OF THE FACTORY FASTENERS)

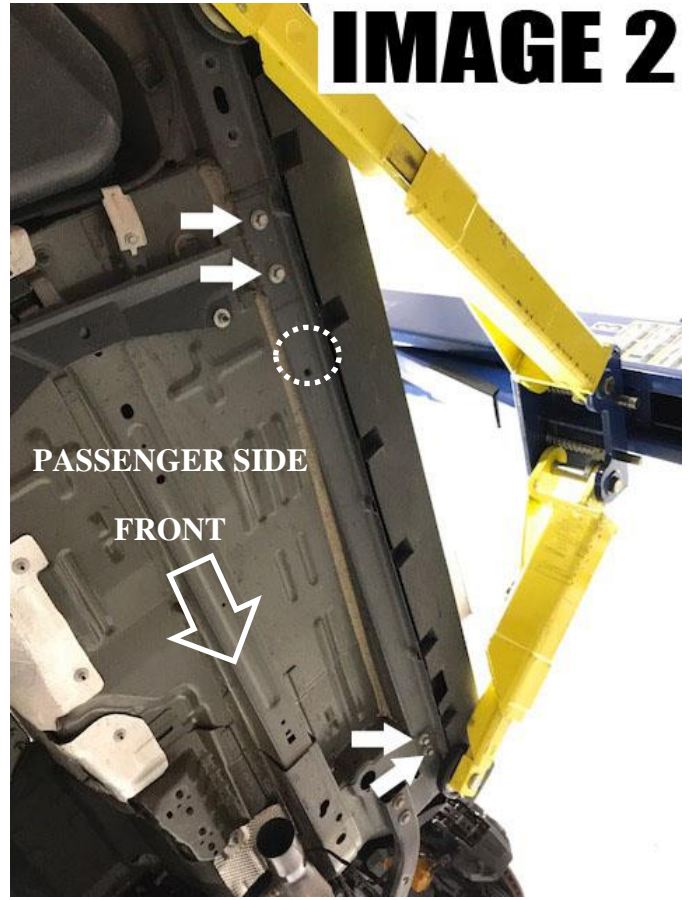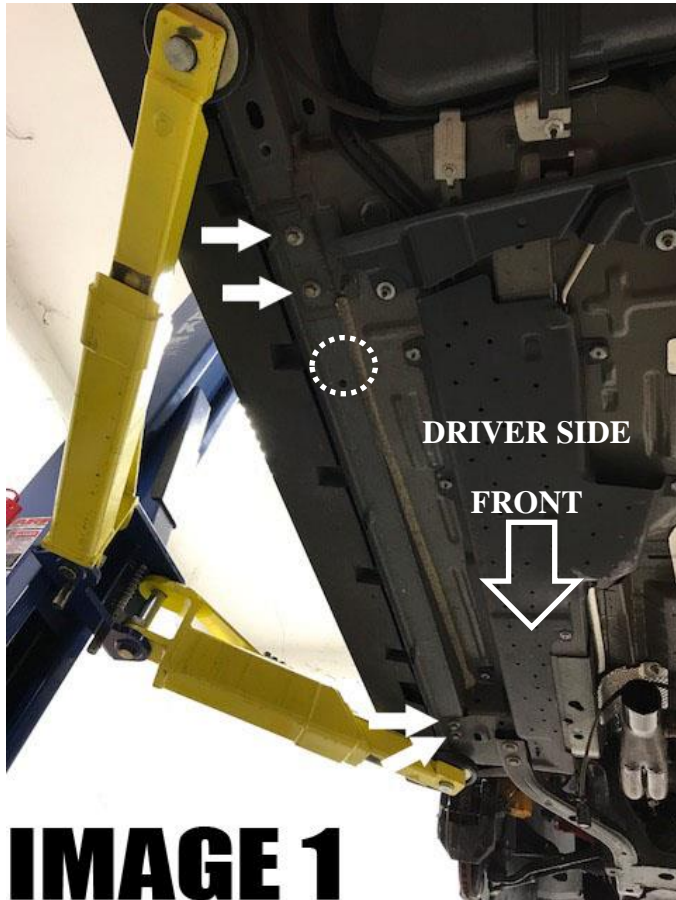



3. Install jacking rails using factory 15mm bolts as shown in **IMAGE 3** and **4**. Start all bolts and then tighten to 41ftlbs once all bolts have been threaded.

NOTE: Drivers side rail is longer than passenger side.

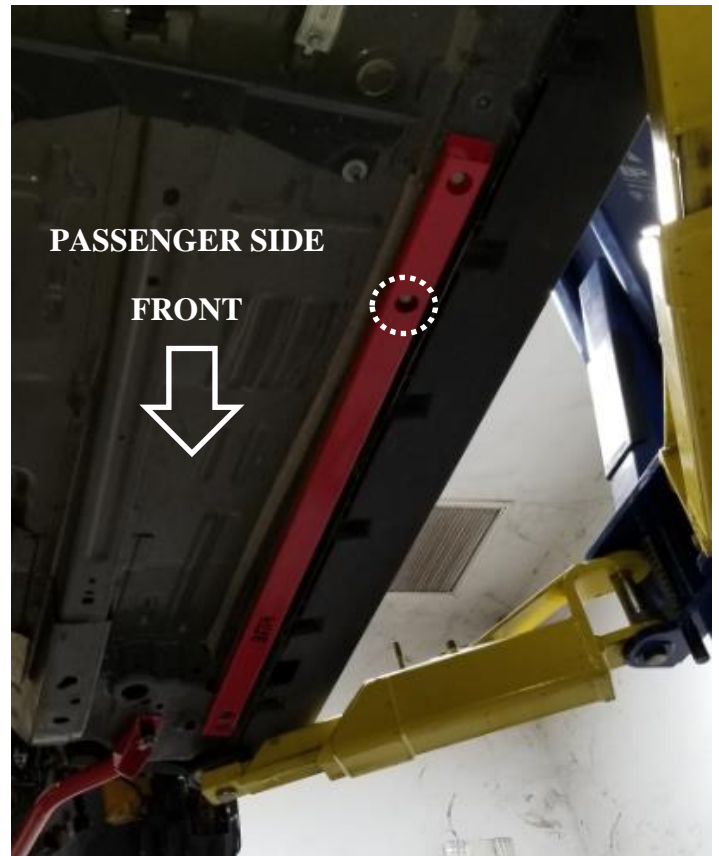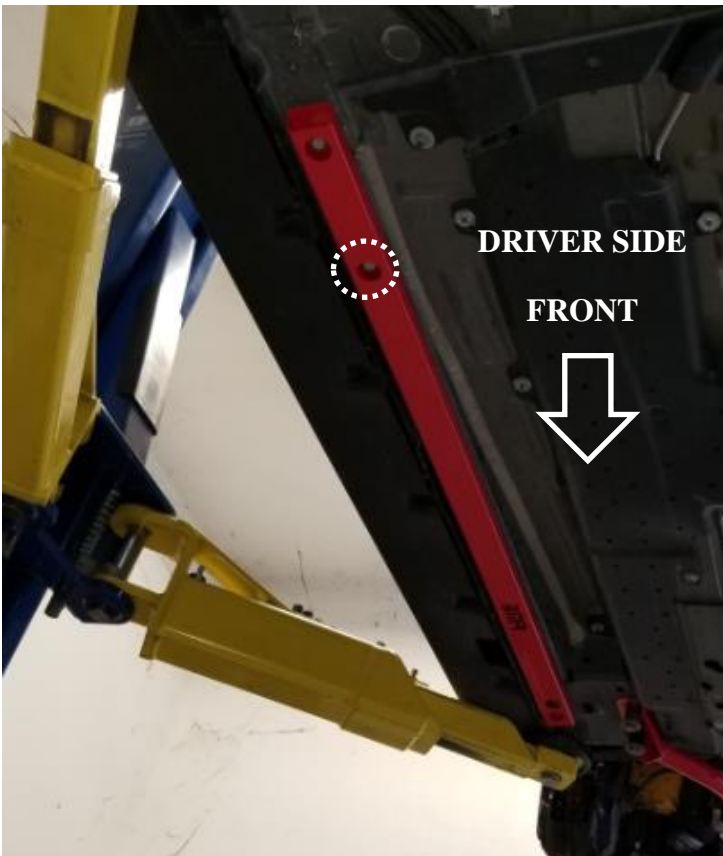

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.