

BMR SUSPENSION


CRB740 INSTALLATION INSTRUCTIONS

Recommended Tools:

- 9/16" socket and wrench

Instructions:

- 1) Using the supplied hardware, install the brace to the underside of your KM743 or 744.
- 2) Have the head of the bolt on the same side as the control arms as shown below.
- 3) Torque all four (4) fasteners to 45ftlbs.

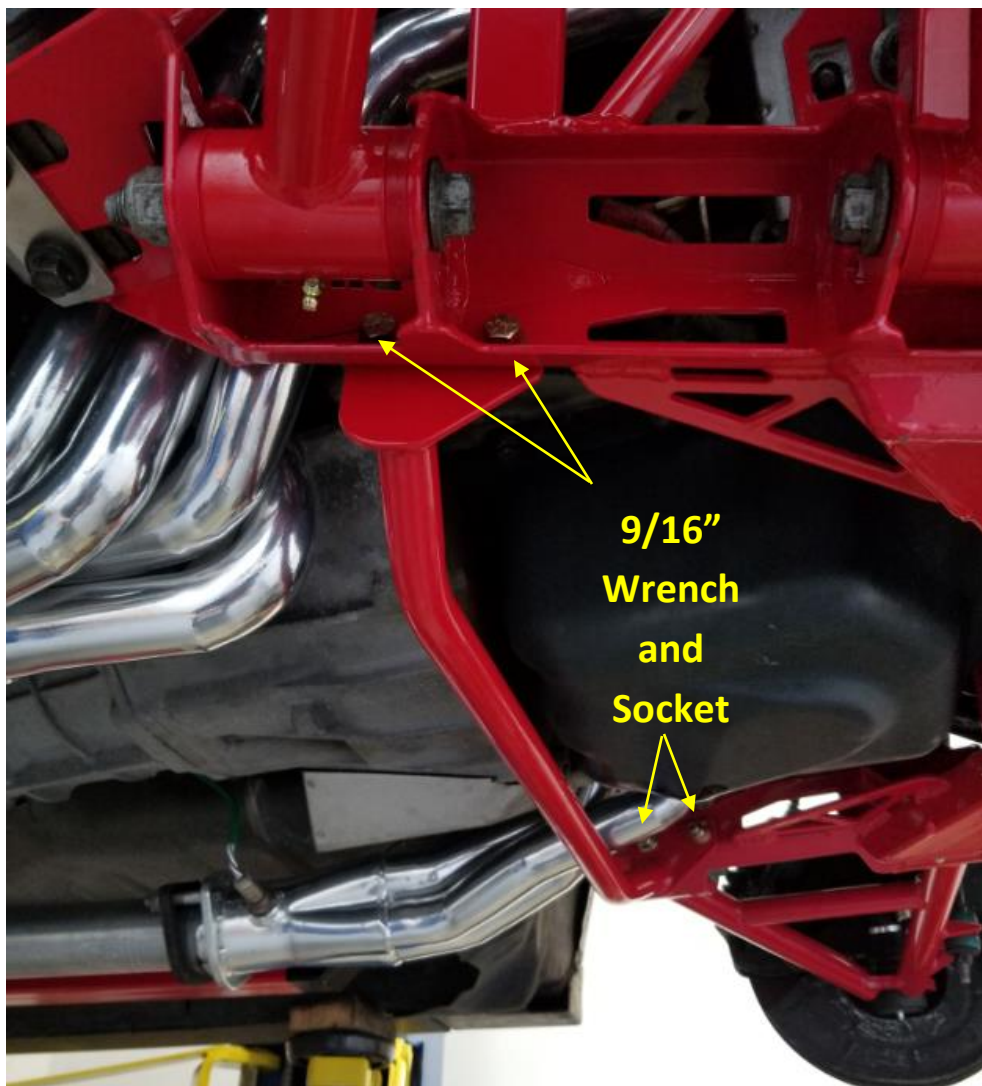

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.