




DSL460 INSTALLATION INSTRUCTIONS

Tools required:

- 13mm, 9/16" socket/wrench

Instructions:

- 1) With the vehicle in the air and properly supported, remove the factory tunnel brace.
- 2) Loosely install the formed main plate to the floor of the vehicle using the provided 13mm head bolts and washer.
- 3) Place the driveshaft loop over the drive shaft and loosely start the 9/16" headed bolt and nuts.
NOTE: The loop is reversible to give maximum adjustment and clearance depending on your set up.
- 4) Center the main plate to give proper driveshaft clearance and torque the 13mm headed fasteners to 18ftlbs.
- 5) Center the loop to the driveshaft and torque the 9/16" headed fasteners to 40ftlbs.

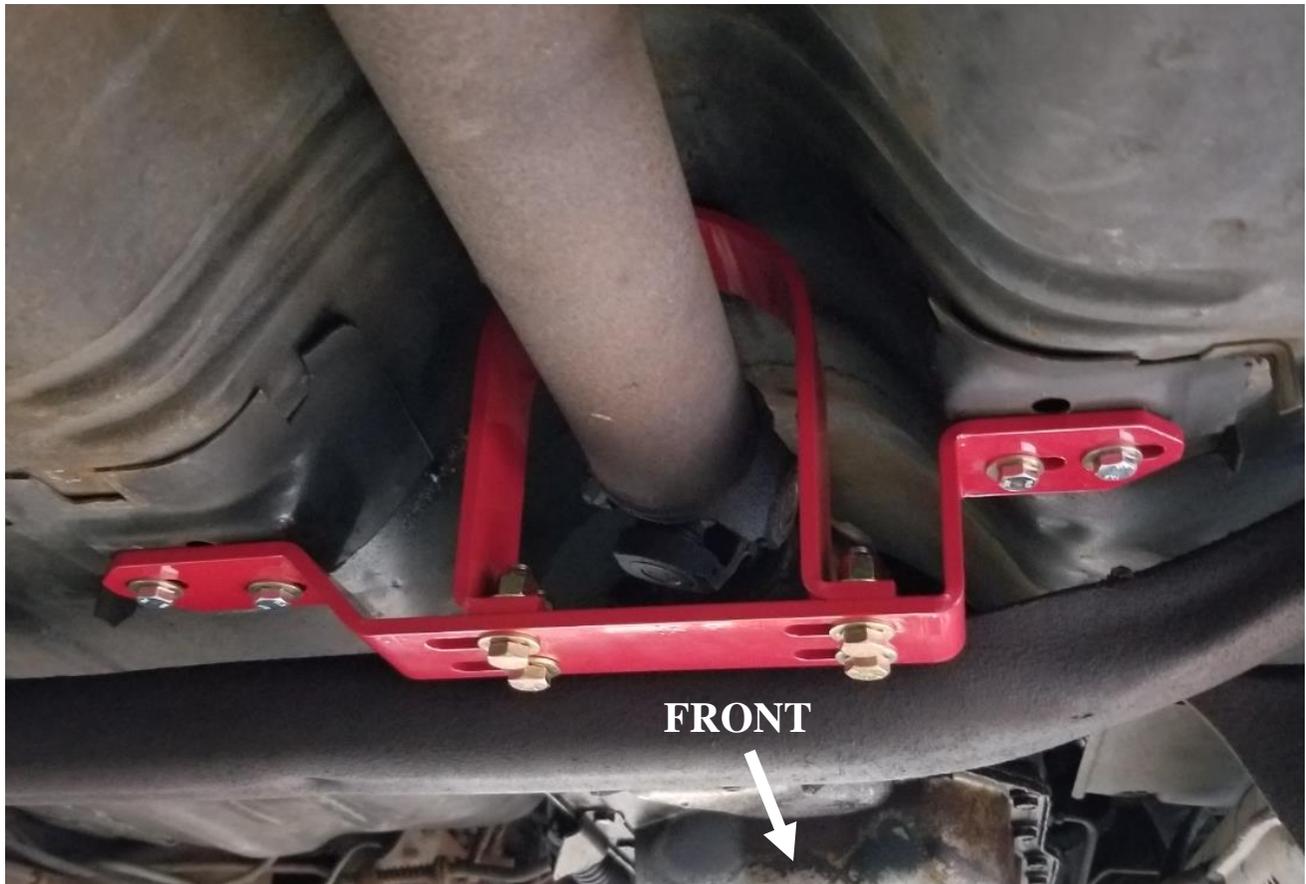

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.