




ELK111 - INSTALLATION INSTRUCTIONS

Tools required:

- Jack and jack stands
- 12mm Allen wrench
- Wrenches and/or sockets: 10mm, 21mm, 15/16", 1"

FRONT Installation:

1. Lift front of vehicle and remove both wheels/tires.
2. Use a 21mm wrench to remove the nuts on the factory end links. If the stud turns while loosening, use a 10mm wrench to hold it.
3. Once the end links are removed, adjust the BMR end links to the proper length using the factory links as reference.
4. Once the desired length has been set, tighten the jam nuts on the BMR end links using a 15/16" and 1" wrench.
5. Install the BMR end links using the provided 14mm x 80mm Allen bolt and new poly-lock nut. Tighten the nut using a 12mm Allen wrench and 21mm socket.
6. Re-install the wheels/tires and lower the vehicle.

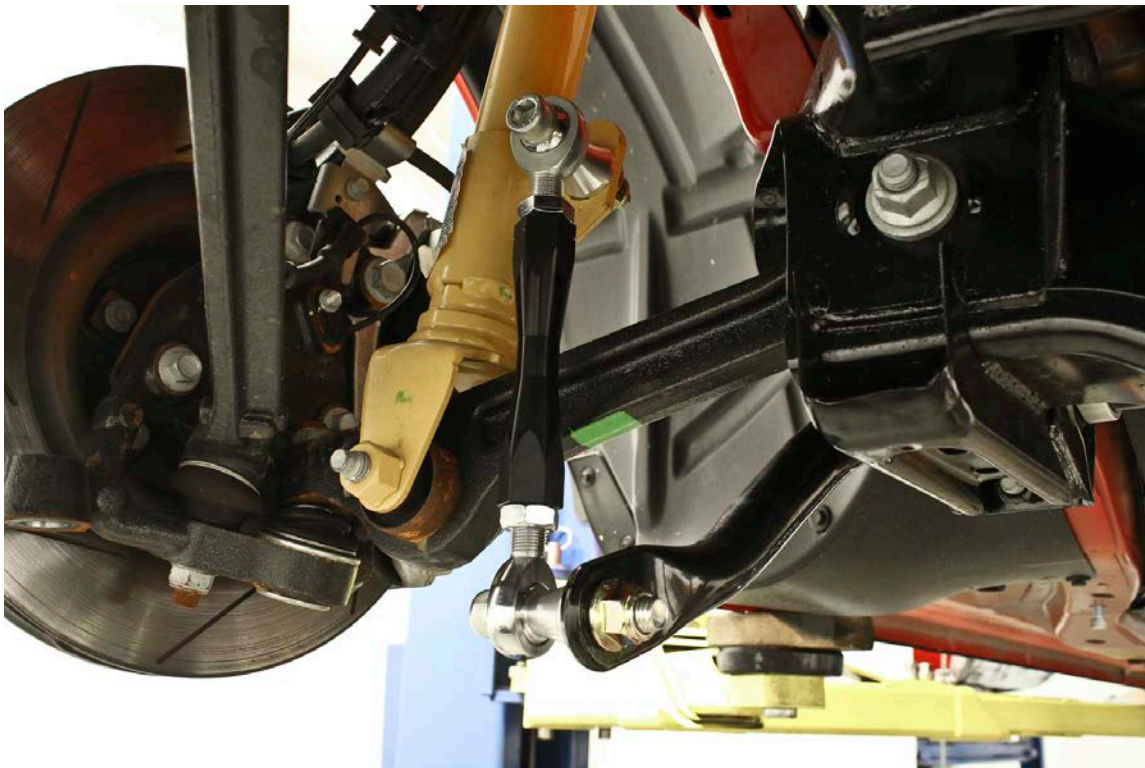

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any injury caused to the vehicle/person during installation or use of this product.