




Rear Sway Bar Installation Instructions

Tools Required:

- Hydraulic jack and jack stands
- 5/8" wrench and socket

Installation:

1. Lift the rear of the vehicle and safely support with jack stands under the frame rails.
2. If the vehicle came equipped with a factory rear sway bar, remove the sway bar by un-bolting it from the control arms.
3. If your vehicle did not come with a factory rear sway bar you must either upgrade to an aftermarket set of lower control arms or upgrade your factory control arms with the spacer and shims shown in **IMAGE 1** (Part number GM #10000097).
4. Using the provided hardware, bolt the BMR sway bar to the lower control arms and tighten the bolts with a 5/8" wrench and socket. torque to **45 ft lbs.**
5. Lower vehicle.

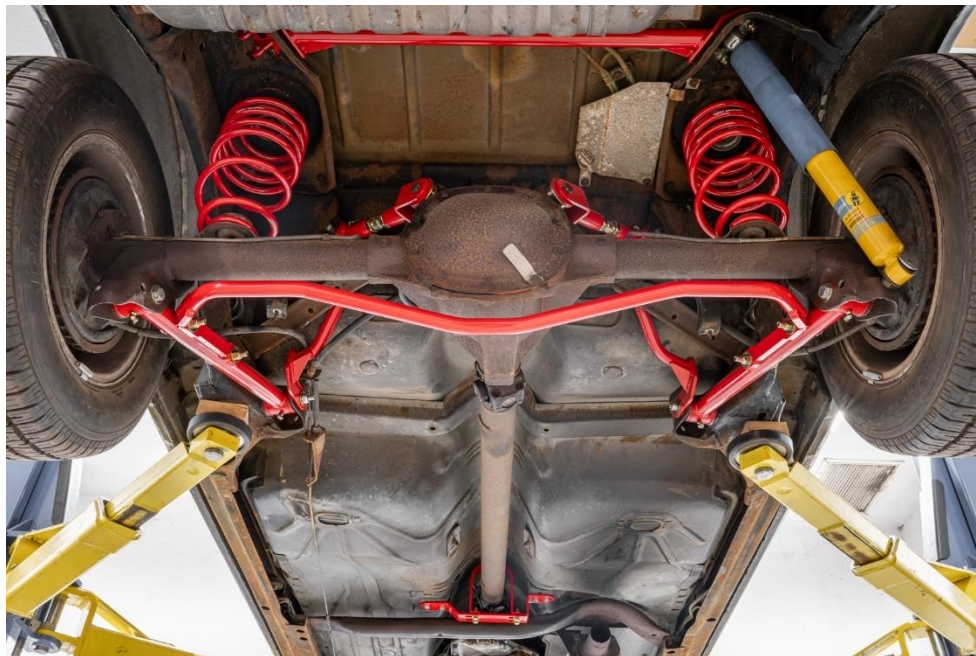

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to the vehicle/person during installation or use of this product.