




STB020 Installation Instructions

Tools required:

- Ratchet
- 13mm socket
- 14mm socket
- 14mm wrench

1. Using the 13mm socket, remove the 6 strut tower bolts as shown in **IMAGE 1**.
2. Install STB020 using supplied hardware, placing provided spacers under the STB020 at each bolt as shown in **IMAGE 2**.
3. Tighten all 13mm mounting bolts to 16 ft/lbs.
4. Tighten two 14mm nuts until brace is secure.

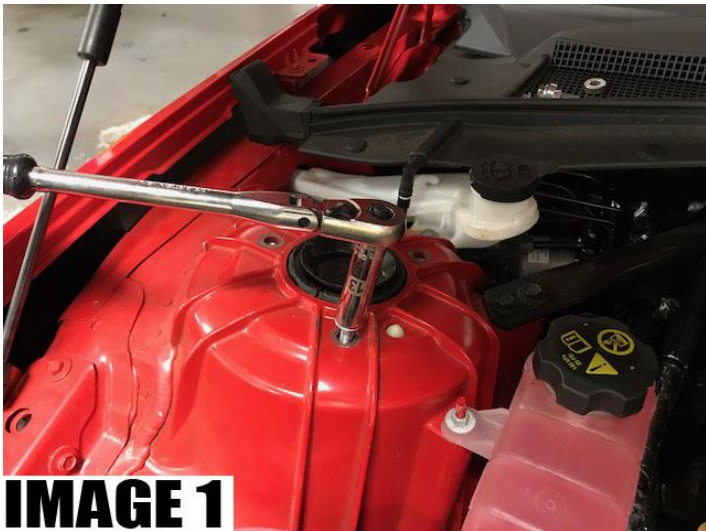

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.