



## TCA023 INSTALLATION INSTRUCTIONS

### Tools required:


- 21 mm wrenches and socket

### Instructions:

1. Raise vehicle and securely support with jack stands, remove the rear wheels.
2. Using a set of jack stands, support the rear end.
3. Using a 21mm socket and wrench, loosen the front and rear bolts of the stock lower control arm.
4. Remove the lower control arm and replace with new arm.

(NOTE: Position the arm with the 90-degree grease fitting in the front chassis mount, facing down and towards the rear. The straight grease fitting should also face rearward in the mount of the rear end. )

5. Torque bolts to 74 ft-lbs and lower vehicle.

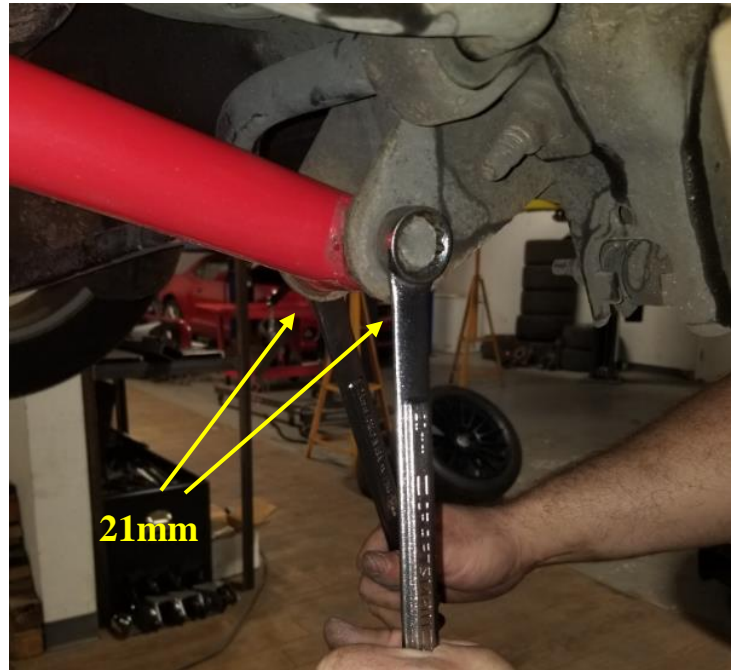

**WWW.BMRSUSPENSION.COM**

*This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to vehicle/person during installation or use of this product.*