


# Toe Rod Sleeve Installation Instructions

## TOOLS REQUIRED:

- Hydraulic jack and jack stands
- Standard wrench set

## INSTRUCTIONS:

1. Lift the front of the vehicle and safely support with jackstands
2. Removal of the front wheels will make it easier to access the tie rod ends

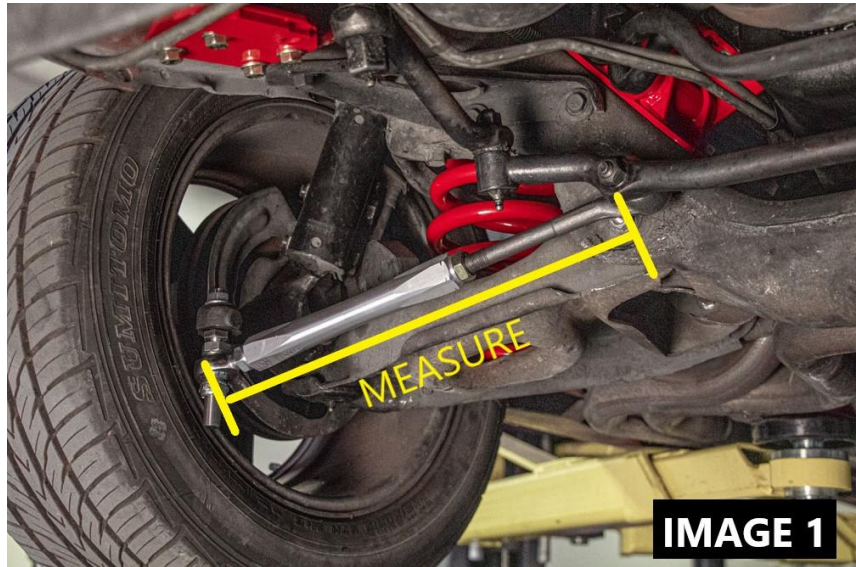

3. Measure the distance from the inner tie rod end to the outer tie rod end **IMAGE 1**
4. Loosen the collars on the tie rods and remove the nuts holding the outer tie rod to the spindle
5. Unthread the adjuster from the inner tie rod
6. Remove and discard the adjuster
7. Install the jam nut, and the new adjuster onto the inner tie rod, then thread the other jam nut onto the outer tie rod end and thread the outer tie rod end into the adjuster
8. Turn the adjuster in or out to get the spindle-to-spindle measurement equal to the measurement taken in **STEP 3**
9. Tighten the jam nuts to lock the adjuster in place
10. Put the wheels back on and lower the vehicle

**An alignment is recommended after installation**

**WWW.BMRSUSPENSION.COM**

*This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, Buyer assumes all risk of any damage caused to the vehicle or person during installation or use of this product.*