



WL007 INSTALLATION INSTRUCTIONS

Tools required:

(2) 3/4" Wrenches


(2) 9/16" Wrenches

(2) 15/16" Wrenches

Hydraulic jack and Jack stands

Installation:

1. Chock the front tires then lift the vehicle and support with jack stands under the rear end.
2. Using (2) 9/16" wrenches, remove the (2) outer bolts on the Watts link support brackets. (**IMAGE 1**)
3. Using (2) 3/4" wrenches, remove the center pivot bolt on the Watts link pivot then lower the assembly. (**IMAGE 1**)
4. Using (2) 15/16" wrenches, remove the (2) inner 5/8" bolts on the Watts linkages as shown in **IMAGE 2**.
5. Transfer the pivot support, hardware, and shims to the new WL007 pivot as shown in **IMAGE 3**. Do not use the existing 5/8" bolts and nuts.

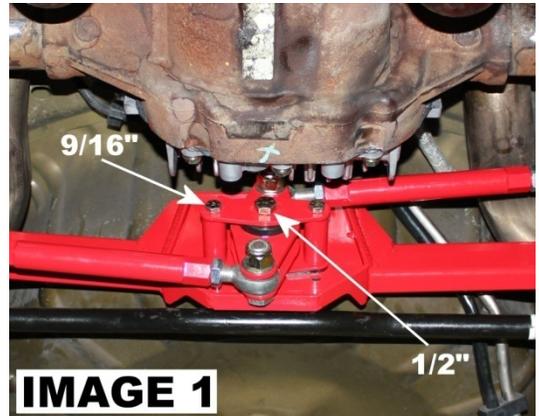

6. Connect the Watts linkages to the new pivot using the new provided 5/8" x 2" bolts, washers, and lock washers. **IMAGE 4**
7. Raise the assembly up and bolt it to the desired hole location.
8. Grease the fitting in the new WL007 Watts link pivot.
9. Make sure all hardware is tight then lower the vehicle.

WWW.BMRSUSPENSION.COM

This product is an aftermarket accessory and not designed by the vehicles manufacturer for use on this vehicle. As such, buyer assumes all risk of any damage caused to the vehicle/person during installation or use of this product.