

### **RECOMMENDED TOOLS:**


- Jack and jack stands
- Wrenches: 18mm, 15mm, 13mm, 5mm Allen
- Sockets: 18mm, 17mm, 15mm, 13mm deep well
- 3/8" drive ratchet, 6" extension
- Prybar

#### **INSTALLATION:**

- 1. Lift the vehicle at all four corners. Place jack stands so as to not interfere with removal of the exhaust system.
- It is necessary to remove the entire exhaust to access the mounting area for the driveshaft loop. Begin by unplugging both side rear exhaust cutouts if your vehicle is equipped with them.
- 3. Using the 15mm wrench, remove both rear exhaust hanger brackets as seen in **IMAGE 1**.
- 4. Moving forward, remove the (5) bolts on the chassis brace using a 13mm wrench or socket. **IMAGE 2**
- 5. Unplug the (4) Oxygen sensor plugs shown in **IMAGE 3**.
- Using the 15mm wrench, unbolt the passenger side exhaust at the flange after the catalytic converter (IMAGE 4) Use a 15mm deep well socket and extension to remove the driver's side further forward at the manifold.
- 7. Support the exhaust system with a jack.





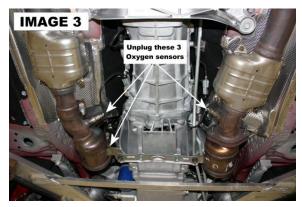




#### WWW.BMRSUSPENSION.COM




 Using a 13mm wrench or socket, remove the exhaust brace where it attaches to the transmission bellhousing shown in IMAGE 5

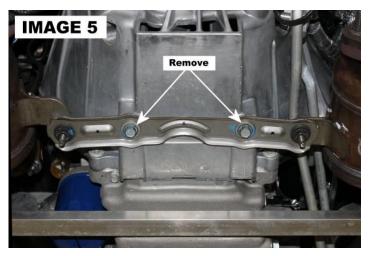

9. Remove all rubber exhaust hanger bushings with a pry-bar, as seen in **IMAGE 6**, then lower the exhaust and set it aside.



- 10. Using a 10mm socket, remove the (6) bolts on the heat shield as shown in **IMAGE 7**. Temporarily remove the heat shield.
- 11. Using a 13mm wrench or socket, remove the stock driveshaft tunnel brace (IMAGE 8)

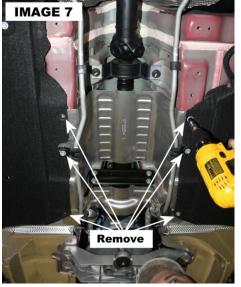



WWW.BMRSUSPENSION.COM



- 12. Slip the BMR upper driveshaft loop around the narrow part of the driveshaft as shown in **IMAGE 9** and then slide the loop up the shaft to the mounting position. Ensure the wider hole spacing is facing forward with respect to the vehicle.
- Using the supplied bolts and smaller diameter washers, bolt the driveshaft into place and tighten



with a 5mm Allen socket or wrench, tighten the 4 supplied bolts to 25 ft/lb (IMAGE 10)

- 14. If using the stock driveshaft, skip steps 15-19 and proceed to step 20. If using an aftermarket one-piece driveshaft, proceed to step 11.
- 15. If you already have a one-piece shaft installed it will be necessary to unbolt one end to slide the driveshaft loop over. Once the loop is over the driveshaft, re-connect the driveshaft and then bolt in the loop as shown in IMAGE 10
- 16. Due to the larger diameter of the one-piece shaft and to improve driveline angle it is necessary to lower the transmission to insure adequate clearance around the driveshaft.
- 17. Place a stand under the transmission then remove the (4) bolts using an 18mm wrench or socket.



WWW.BMRSUSPENSION.COM



- 18. Lower the transmission cross-member and insert the provided aluminum spacers as shown in
  IMAGE 11. Note the orientation of the spacers when installing them.
  Place the spacer in such a way that the relief clears the raised sheetmetal on the floorpan.
- 19. Using the provided 12mm bolts and washers, bolt the cross-member back in



place and tighten to **39 ft/lbs** using a 17mm socket.

20. Re-install the heat shield, chassis brace, and exhaust using steps 1-10 in reverse.



WWW.BMRSUSPENSION.COM